



J-DRain® SWD

Foundation Wall Drainage

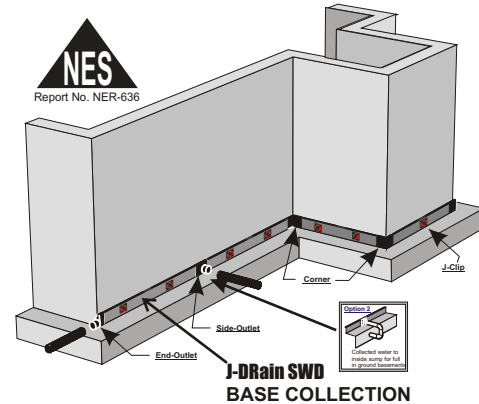

SWD Foundation Wall Installation Instructions:

1 Clean Off Footer

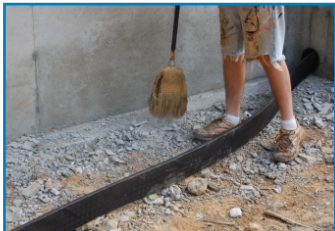

2 Apply Waterproofing Membrane



3 Unroll SWD

Place vertically against foundation wall, on footer.



4 Feed SWD Through Stoop Box



5 Attach J-DRain Fittings:

Determine location for all applicable **J-DRain** fittings (shown in pictures). Cut **J-DRain SWD** to proper length between fittings (allow for extra length for insertion into fittings). Insert **SWD** completely into fittings.

Tape fittings with **J-Tape**. *Note: Attach & tape 4" pipe to end/side outlet fitting to carry water to sump pump or daylight.



End Outlet (*to 4" pipe)



SIDE OUTLET (*to sump)



OUTSIDE CORNER



INSIDE CORNER
STEP DOWN



END CAP

6 Nail J-DRain SWD to Wall with J-Clip:

Nail **J-Clip** every 8-10 feet as well as on either side of **J-DRain** fittings.



7 Ready to Backfill:

